



- The floor must be clean of debris. Any build-up of grease and oil must be removed. Failure to do so may result in premature failure of The Ultra-Berm Builder[®] sealant.
- 2. To apply The Ultra-Berm Builder[®] over frost cracks and form separations, first fill these areas with caulking.
- 3. Apply 2 continuous beads of caulking on the bottom of the The Ultra-Berm Builder[®] approximately 1" in from its side and ends, along its entire length.
- Place The Ultra-Berm Builder[®] and apply pressure to its entire length to seal it to the floor. Note: To ensure proper sealing on uneven surfaces, you may need to apply extra sealant and also more direct pressure.
- 5. To add sections or attach corners to the The Ultra-Berm Builder[®], apply vinyl adhesive to the built-in vinyl cover and the end of the berm. Then mold the vinyl cover over the berm end and hold in place (approximately 30 seconds).

IMPORTANT NOTES:

- If it has been stored coiled, let the Ultra-Berm Builder[®] lie flat for 2 hours before installing it.
- Let the Ultra-Berm Builder[®] cure (sealant and glue) for at least one hour before use.
- To cut the Ultra-Berm Builder[®], use a utility knife along with a straight edge.
- To remove the Ultra-Berm Builder[®], scrape with a flat-blade shovel and use silicone remover to clean caulking from base.

