



Ramps for Ultra-Spill Pallets®

NOTE: These instructions are for two ramps, Part# 0676 and Part# 0678. The procedure is the same for both and the plastic ramp is exactly the same. The only difference in the two parts is the size of the metal end plate.

1. Remove the nut and bolt from each side of the ramp.
2. Position the end plate as shown
3. Place a flat washer over the bolt and slide the bolt through the hole on the outside wall of the ramp.
4. Insert the ramp end plate tabs into the slots in the front of the ramp.
5. Pass the bolt through the hole in the end plate tab and the next hole in the ramp.
6. Slide a flat washer over the end of the bolt and attach the hex nut. Be careful not to overtighten.
7. Repeat steps 1-6 for other side.

