



ULTRATECH
INTERNATIONAL, INC


Sold by:
ONE
CLARION

Ultra-Spill Deck Ramp (Part# 1089)

Assembly Instructions

Hardware List

- Four (4) self-tapping screws
- Two (2) metal screw anchors
- Two (2) short hook brackets
- Two (2) long hook brackets (used when attaching ramp to the wider border on the 4-drum Spill Decks.

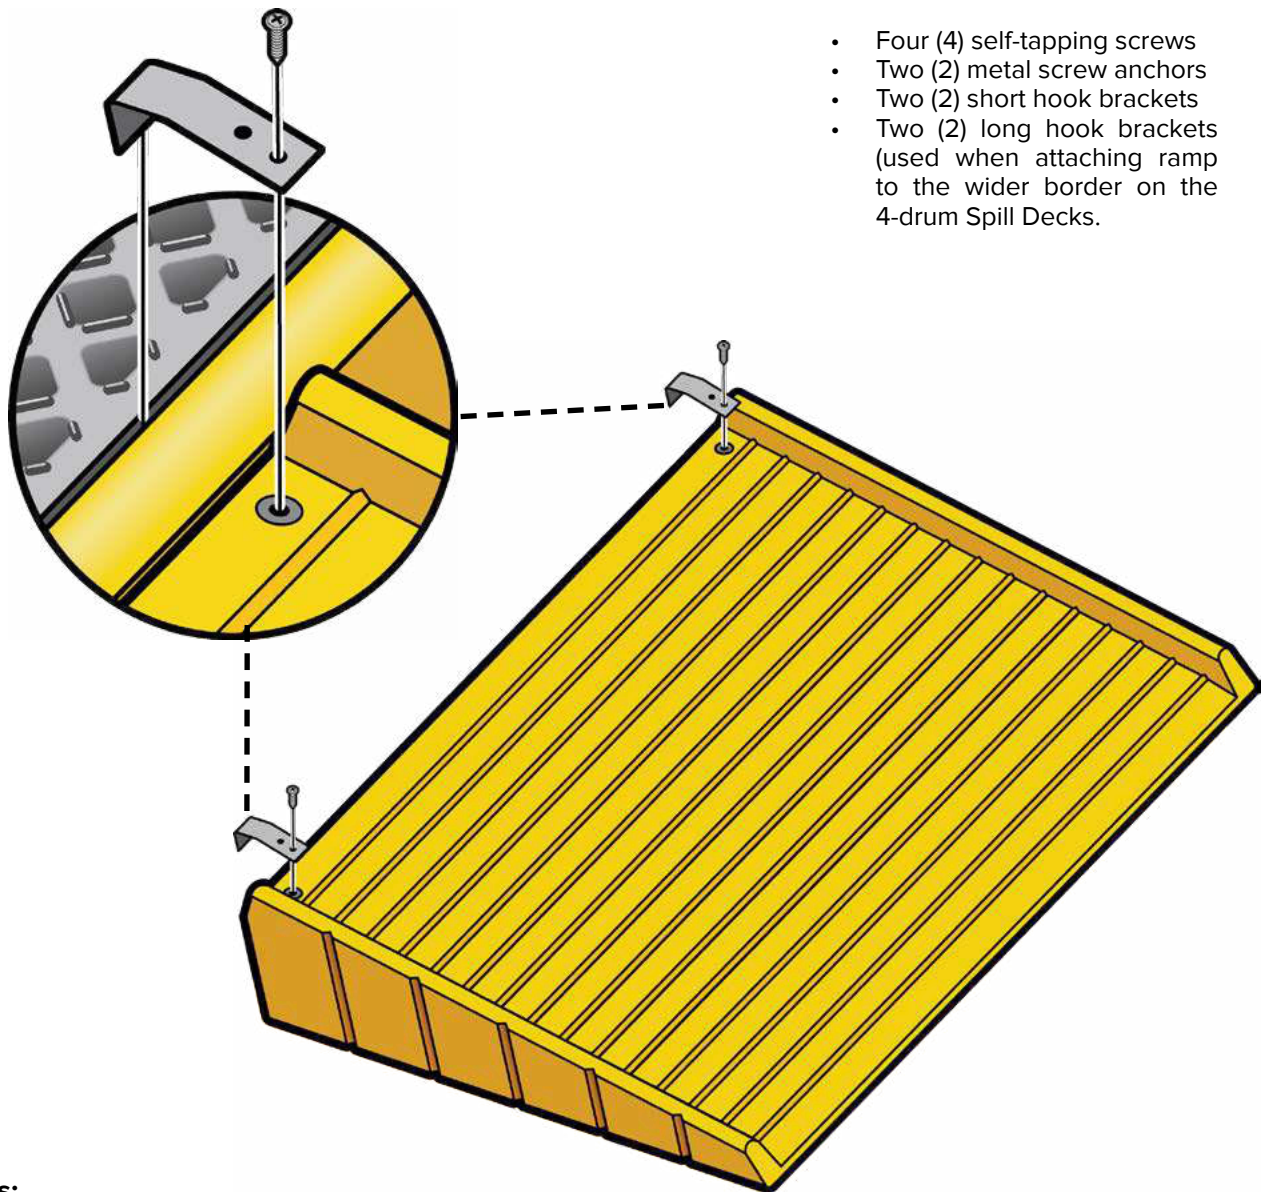

Instructions:

1. Select the proper hook bracket from the enclosed hardware packet. The bracket selection is determined by the location that the ramp will be placed.
2. Align the first hole behind the bend in the hook bracket with the metal screw anchor and fasten with self-tapping screw. Do not overtighten.
3. Insert a self-tapping screw in the remaining hole in the hook bracket. Do not overtighten.
4. Repeat steps 1 through 3 for the remaining side.